

MKS CT150

人机默认值

通讯速率：9600, 7, Even, 1 (RS-232)

控制器站号：11

控制区/状态区：None / None

控制器接线的说明

a. RS-232 (DOP-A/AE/AS, DOP-B 系列适用)

DOP 接线端	Controller 接线端
9 pin D-SUB (RS-232)	9 pin D-sub male (RS-232)
RXD (2)	(3) TXD
TXD (3)	(2) RXD
GND (5)	(5) SG

控制器 Read/Write 地址的定义

a. 寄存器

寄存器种类	符号格式	读写地址范围	数据长度	注
	Word No.(n)			
Data In Register	Cn	C0 – C25		
Setup Register	Cn	C40 – C43; C45 – C50; C90 – C97		
Error Count	Err_CNT	0		
LV Value	LV_VAL	0		
Printmark Error	PRTMARK_ERR	0		
Batch Counter	BAT_CNT	0		
Waste Counter	WASTE_CNT	0		
Line Speed	LINE_SPD	0		
Actual Cutting Length	ACT_CUT_LEN	0		

b. 接点

接点种类	符号格式	读写地址范围	注
	Bit No.(b)		
Register	Cn.b	C0.0 – C50.15	
Reset	RST	0	
Jog Trim+	JOGTRIM_INC	0	
Jog Trim-	JOGTRIM_DEC	0	
Read PI	READ_PI	0	
Activate Data	ACT_DATA	0	
Store Eeprom	STR_EEPROM	0	
Start/Stop	START_STOP	0	
Reset Mark Counter	RSTMARK_CNT	0	