

AH10PFBM-5A

EN Instruction Sheet
TR Bilgi Dökümanı
TW 安裝說明
CN 安装说明



- EN ✘ This is an OPEN TYPE module and therefore should be installed in an enclosure free of airborne dust, humidity, electric shock and vibration. The enclosure should prevent non-maintenance staff from operating the device (e.g. key or specific tools are required for operating the enclosure) in case danger and damage on the device may occur.
- TR ✘ Bu ürün AÇIK TİP bir modül olup toz, rutubet, elektrik şoku ve titreşimden uzak kapalı yerlerde muhafaza edilmelidir. Yanlış kullanım sonucu ürünün zarar görmesini önlemek için yetkili olmayan kişiler tarafından ürüne müdahale edilmesini önleyecek koruyucu önlemler alınmalıdır. (Ürünün bulunduğu panoya kilit konulması gibi).
- TW ✘ 本機為開放型 (OPEN TYPE) 機種，因此使用者使用本機時，必須將之安裝於具防塵、防潮及免於電擊/衝擊意外之外殼配線箱內。另必須具備保護措施 (如：特殊之工具或鑰匙才可打開) 防止非維護人員操作或意外衝擊本體，造成危險及損壞。
- CN ✘ 本机为开放型 (OPEN TYPE) 机种，因此使用者使用本机时，必须将其安装于具防尘、防潮及免于电击/冲击意外的外壳配线箱内。另必须具备保护措施 (如：特殊的工具或钥匙才可打开) 防止非维护人员操作或意外冲击本体，造成危险及损坏。

EN Please refer to the AH500 Hardware Manual for more information.

TW 詳細資料請參考 AH500 硬體手冊

TR Daha fazla bilgi için lütfen AH500 Donanım Klavuzuna bakınız.

CN 详细资料请参考 AH500 硬件手册

EN Assembly

TR Montaj

TW 安裝


CN 组装

EN Insert the module projections into the holes on the backplane. Then, push the module in the direction indicated by the arrow until it clicks. Finally, tighten the screws on the module.

TR Modül çıkıntısını alt panel üzerindeki deliklere yerleştiriniz. Daha sonra ok işareti ile gösterilen yönde tıklayıncaya kadar modülü itiniz. Son olarak modül üzerindeki vidaları sıkınız.

TW 將模組下方的卡勾卡在背板的卡槽，對準背板的 IO 端口將此模組向前壓，安裝後將此模組上方的螺絲鎖緊。

CN 将模块下方的卡勾卡在背板的卡槽，对准背板的 IO 接口將此模块向前压，安装后将此模块上方的螺丝锁紧。

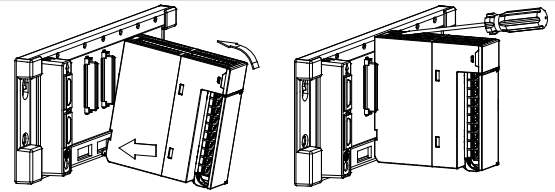

Delta Greentech Elektronik San. Ltd. Şti.

Şerifali Mahallesi, Hendem Caddesi, Kule Sokak, No:16,
A Blok Ümraniye / İstanbul, Türkiye

TEL: +90 216 499 99 10 Fax: +90 216 499 80 70

Website: www.delta-turkey.com

Factory information:

Delta Electronics, Inc.

Taiwan

31-1 Xingbang Road,
Guishan Industrial Zone,
Taoyuan County 33370,
Taiwan

TEL: 886-3-362-6301

FAX: 886-3-362-7267

China

1688 Jiangxing East Road,
Wujiang Economic Development Zone
Wujiang City, Jiang Su Province,
People's Republic of China (Post code: 215200)

TEL: 86-512-6340-3008


FAX: 86-769-6340-7290

EN Dimensions(mm) & Product Profile

TR Ölçüler(mm) & Ürün Görünüşü

TW 尺寸(mm)及產品外觀

CN 尺寸(mm)及產品外觀

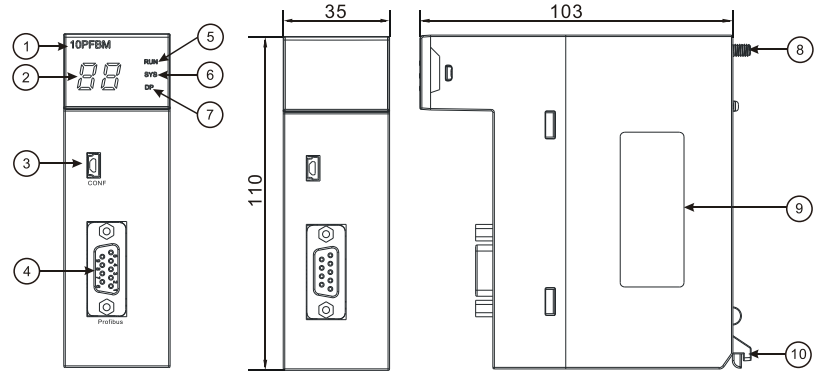

	EN	TR	TW	CN
1	Model name	Model adı	機種名稱	机种名称
2	7-segment display	7-segment ekran	七段顯示器	七段显示器
3	USB communication port	USB haberleşme port	USB 通訊口通訊埠	USB 通讯口
4	PROFIBUS-DP communication port	PROFIBUS-DP haberleşme port	PROFIBUS-DP 通訊埠	PROFIBUS-DP 通讯口
5	RUN indicator	RUN göstergesi	RUN 指示燈	RUN 指示灯
6	SYS indicator	SYS göstergesi	SYS 指示燈	SYS 指示灯
7	DP indicator	DP göstergesi	DP 指示燈	DP 指示灯
8	Screw	Vida	固定螺絲	固定螺丝
9	Label	Etiket	標籤	标签
10	Module clip	Modül klipsi	模組固定卡口	模块固定卡口

EN	Pin definition	TR	Pin açıklama	TW	接腳定義	CN	引脚定义
1/2	N/C		3	Rxd/Txd-P			
4	N/C		5	DGND			
6	VP		7	N/C			
8	Rxd/Txd-N		9	N/C			

